

QUICK START GUIDE

INDUCTION RANGES



Operation

- Turn the control knob clockwise to select the desired level.
- Place induction-compatible cookware in the center of the corresponding hob. The cooktop indicator light will blink until compatible cookware is detected, then turn solid.



Six Hob

Four Hob

Regular Care & Maintenance

1. Turn all knobs to the OFF position.
2. For maintenance or repair only, use the disconnect switch or circuit breaker to completely turn off the power.
3. Wipe the outside with a suitable cleaner, rinse, and then dry.
4. If the filter becomes dirty, complete the following steps to remove and clean:
 - **Note:** Monthly cleaning is recommended.
 - a. Remove the thumbscrew.
 - b. Pull the filter guard forward to access the air filters.
 - c. Lift the filter, slide it forward, and remove it.
 - d. Wash the filter with cold water or in a dishwasher.
 - e. Ensure the filter is completely dry before reinstalling. Monthly cleaning is recommended.
 - **Note:** Always make sure the filters are completely dry before reinstallation to avoid damage or operational issues. Never reinstall a wet filter into the unit.

Important Notes

- Use induction-compatible cookware only.
- Center cookware on the selected hob for optimal performance.
- Each hob accommodates cookware with a cooking circumference of up to 12 in. (305 mm).

